

# User manual

## Diagnostic system OBD Manual version 1.13 Eng



**User manual**

Diagnostic system OBD Release v1.13  
Copyright © 2016 Autocom Diagnostic Partner AB

# Table of contents

Table of contents.....	3
<b>1 Important information.....</b>	<b>6</b>
1.1 Agreement.....	6
1.2 Copyright.....	6
1.3 Program versions.....	6
1.4 Responsibility and liability.....	6
1.5 Warranty.....	6
1.6 WEEE (Waste Electrical and Electronic Equipment).....	7
<b>2 System requirements .....</b>	<b>8</b>
<b>3 Installation.....</b>	<b>9</b>
3.1 Installation using DVD.....	9
3.2 Installation from <a href="http://www.autocom.se">www.autocom.se</a> .....	9
<b>4 Hardware.....</b>	<b>10</b>
4.1 Introduction.....	10
4.2 Connections CDP+ .....	10
<b>5 Computer configuration.....</b>	<b>12</b>
5.1 Bluetooth.....	12
5.2 USB.....	13
<b>6 General use of the program.....</b>	<b>14</b>
6.1 Introduction.....	14
6.2 Program / Vehicle selection.....	14
6.3 Navigation.....	16
<b>7 General functionality.....</b>	<b>17</b>
7.1 Program help.....	17
7.2 Save & print test report.....	17
7.3 Open saved test report.....	17
7.4 External programs.....	17
7.5 Demo mode.....	17
7.6 License.....	17
<b>8 Program configuration .....</b>	<b>18</b>
8.1 Workshop information .....	18
8.2 Language.....	18
8.3 Hardware settings.....	18

**9 OBD - On Board Diagnostics .....19**

9.1 Introduction..... 19

9.2 Connection..... 19

9.3 Distributed control systems..... 19

9.4 Diagnostic functions ..... 20

**10 Generic OBD.....27**

10.1 Introduction..... 27

10.2 Connecting to vehicle..... 27

10.3 General use of the program ..... 27

**11 Technical specification .....31**

## **Thank you for choosing our products!**

We are certain that you will have great use of this diagnostic equipment for a long time. We will make sure that updated vehicle databases always are available, with the absolutely best coverage on your specific market.

# 1 Important information

Always read the user manual carefully before connecting, starting up, and using the diagnostic equipment, to eliminate any doubts and risks associated with the diagnostic equipment. All use, including connecting the diagnostic unit near the engine or ignition system, should take place when the engine is not running and when the ignition is off. Any person who hands over the diagnostic equipment to another person should also hand over safety instructions and necessary information for how the diagnostic equipment should be used according to its intended use.

## 1.1 Agreement

By using this product you accept the following terms:

## 1.2 Copyright

Software and data are the property of the supplier, and are protected against unauthorised copying by copyright legislation, international contract regulations, and other national rules. Copying or sales of data, or software or parts thereof, is punishable by law. In case of any violation, the supplier reserves the right to prosecute and demand compensation for damages.

## 1.3 Program versions

We always do the utmost to optimise our products to suit the market and region where the products are sold and used.

As a step in this process, we have automated the setup of geographical preferences during the installation. The only choice the person installing the software has to do is to choose the applicable country.

By making a correct choice of country during installation of the software the customer is ensured to have the best setup to fit regional conditions, regarding content of the vehicle database as well as the functionality of the program to fit the applicable vehicle population and local conditions.

## 1.4 Responsibility and liability

To the greatest possible extent, all data in the program is based on information from car manufacturers. The supplier does not guarantee that data or software is correct or complete. The supplier does not accept liability for damages caused by defective software or incorrect data. In all cases liability is limited to the amount that the buyer has paid for the product at the time of purchase. This exemption from liability does not include damages caused intentionally or by gross neglect on the part of the customer.

## 1.5 Warranty

All use of hardware and/or software that has not been approved by the supplier is a modification of our products, and thus no warranties are valid. Our products may not be modified in any way. Only genuine accessories and spare parts may be used, which also applies to adapter cables. All breaches of this will void any claims. The diagnostic equipment may only be used with operative systems approved by the supplier. If the diagnostic equipment is used with an operative system that is not approved by the supplier, the warranty ceases to be valid. Also, the supplier does not accept any liability or responsibility for damages and consequences thereof that have arisen due to the use of a non-approved operative system.

Note that the vehicle manufacturer's instructions must be followed when working on the vehicle. The supplier does not accept any liability or responsibility for damages and consequences thereof that have arisen due to not following the vehicle manufacturer's instructions for the vehicle.

## 1.6 WEEE (Waste Electrical and Electronic Equipment)



This label shows that the product is manufactured after August 13, 2005, and therefore it shall be recycled according to WEEE (EU Directive 2002/96/EC regarding waste from Electrical and Electronic equipment). Contact your local dealer for more information.



## 2 System requirements

Please check [www.autocom.se](http://www.autocom.se) for the system requirements. Go to Products. For each product you will find Technical Specifications including System requirements.

<http://autocom.se/en/autocom.se/en/products/system-requirements>



## 3 Installation

### 3.1 Installation using DVD

NB! On certain computers, antivirus programs and other similar programs may sometimes cause the automatic start-up to not work or take a long time. In any such cases, deactivate these programs. Programs known to cause problems are McAfee VirusScan and ZoneAlarm. After installation, the antivirus programs can be reactivated.

1. Insert the attached USB Security Dongle into the computers USB port.



2. Insert the DVD in the computer's DVD reader. The installation starts automatically. (If the installation does not start, choose "Run" in the "Start"-menu and write D:\Start. Applies if the DVD reader is designated as unit D).



3. Follow instructions in the Installation wizard.
4. The License Activation Tool (LAT) will start automatically and connect to the internet to retrieve accurate license information for the unique VCI serial number. Once this is done, the installation will progress. Now the dongle will control what installations are available (CARS, TRUCKS, GENERIC etc.)

### 3.2 Installation from [www.autocom.se](http://www.autocom.se)

Please note that it is also possible to download a full installation package from [www.autocom.se](http://www.autocom.se). Go to the support and training site for access.

This download has the same content as when you install from the DVD. Follow instructions on the website to complete the download and installation.

## 4 Hardware

### 4.1 Introduction




The diagnostic unit has built-in interfaces for most communications available on the market that are used for OBD (On Board Diagnostic). For certain vehicle models, specific connectors are used for OBD. As accessories there are many unique cables enabling connection to the car's diagnostic connection. Connection to PC takes place using any of the alternatives USB (Universal Serial Bus) or Bluetooth (wireless communication).

### 4.2 Connections CDP+


- |                           |   |
|---------------------------|---|
| 1. OBD                    | 16-pin OBD-II connector (SAE J1962) with built-in flash light   |
| 2. Multi colour indicator | Displays status of connection and communication                 |
| 3. Micro SD card slot     | For memory card type Micro SD                                   |
| 4. Flight Recorder button | For start/stop and set triggers in the flight recorder function |
| 5. USB-connection for PC  |   |





## 4.2.1 Multi colour indicator

<i>Function</i>	<i>Color</i>	<i>Comments</i>	<i>Sound</i>
<b>Power</b>	White	Steady light when power on	
<b>PC-Link</b>	Blue	When USB connected or Bluetooth link established	
<b>Diagnose</b>	Green / Blue	When active diagnose session Green / Blue (50%) 	
<b>Diagnose with lost PC-Link</b>	Green / Blue flashing	lost PC-Link only indicate when active diagnose session 	Warning sound
<b>Low battery</b>	Current color /Red flashing	 White Blue Green Yellow	Warning sound

### *Flight Recorder*

<b>FR Start</b>	Yellow	FR session started, but not logging data	Confirmation FR-Start
<b>FR Stop</b>	-	Stops FR session	Confirmation FR-Stop
<b>FR logging data</b>	Yellow running		
<b>FR logging data no valid respond</b>	-	No valid respond from Vehicle	Warning sound No valid data!
<b>FR trig</b>	-	Push button to set marker	Confirmation FR-Trig

<b>No Firm</b>	Red		
<b>Load firm</b>	Red flashing	 Flashing with reference to data transmission	

# 5 Computer configuration

## 5.1 Bluetooth

### 5.1.1 Introduction

To succeed with the Bluetooth configuration, the Bluetooth card in the computer must be installed correctly and support the service Bluetooth SPP - Serial Port Profile (Virtual Comport). 'Bluetooth card' refers to both internal Bluetooth cards that, e.g., are found in laptop computers as well as Bluetooth-USB-adaptor and other types of Bluetooth cards. For CDP+ use "0000" (four zeros).

### 5.1.2 Configuration

The following is a description of Bluetooth configuration. Note that the configuration may vary depending on the Bluetooth card in the computer.

- Start the Bluetooth manager, usually by choosing Start -> Settings -> Control panel -> Bluetooth.



- In the Bluetooth manager, choose to add new unit. Check that the diagnostic unit is connected to a vehicle or other type of voltage source (power source) before you proceed to search for Bluetooth units.



- When the search is finished, a list is shown with the units that were found. Select and choose the diagnostic unit you want to add.



- If you are asked to use passkey you shall use your own passkey. As passkey use 0000 (four zeros).



- If everything went well the Bluetooth configuration is now finished, and you can go on to the chapter about program configuration and the section hardware settings to search for diagnostic unit.

## 5.2 USB

### 5.2.1 Introduction

NB! It is important that the installation of software has been finished before performing the following steps.


When connecting the CDP+ to the computer the drivers will automatically be installed and the device will be added as a virtual comport.

# 6 General use of the program

## 6.1 Introduction

In order to start the program you double-click on the icon found on the desktop. It is also possible to start the program using the start menu. The user manuals are also grouped in the start menu. The program is designed to make it easy for you to use the program. Great effort has been put into making a user-friendly product where the user always is in focus.

## 6.2 Program / Vehicle selection

- (1) Archive menu: This menu contains the following submenus: File, Settings, Documents, Bookmarks, External programs, VIN and Help.  
Under the menu alternative "File", you find functions to open saved tests and to exit the program. Under Settings there are functions for entering workshop information, choosing language, as well as configuring the hardware.  
Documents holds all documents related to the software like; Manual, Disclaimer, System Requirements, Release News etc.  
External programs contains links to third party programs, if such links are installed.  
The last menu item, which is Help, contains link to the program help, activation of demo mode, license handling, as well as information about the program.
- (2) At the top right in the program window you find general functions such as the activity indicator showing you when the diagnostic software is active communicating to the vehicle etc. There is also a battery indicator showing the status of the vehicles battery in three levels. Green = OK, Yellow = Low (connect a charger to the vehicle battery), Red = Critical (Stop measuring on the vehicle). This feature will get the information from the VCI. It is updated continuously during connection to the vehicle.
- (3) There are a number of options to select and identify your vehicle. By using the VIN decoder, you will be directed to the correct Brand, Model and Year model selection. There is also a possibility to readout the VIN from the vehicle using eOBD standard protocol. Simply press the magnifier icon within the VIN field.  
For some regions there is also a possibility to enter the VRM to select Brand, Model and Year model.  
The History function keeps track of vehicles that have been connected. Once the VCI has connected to a vehicle a new history is created. This is related to Brand, Model and Year model, but also keeps the last selected system in memory for quick access.
- (4) The left-hand menu contains buttons to go back to the home page, launch eOBD stand alone application. There is also buttons for access to the Info System with technical workshop data such as maintenance schedules, torques and enhanced fault descriptions. The Flight recorder button will start the upload of a flight recorder session. See section: 10.3.4.1. The Help button opens this manual. The X-button closes the application.
- (5) Vehicle selection manually. Select your vehicle brand. This will step to the next level, down until a unique system variant is selected. According to the following order:  
Brand - Model - Year model - Type of system - System - Name - Gearbox - Equipment.
- (6) The current selection is displayed, step by step, in the breadcrumb in the top of the screen.
- (7) Use the back arrow located to the left in the breadcrumb to go one level back in the selection, or use the home button  to restart the selection.

When the selection has reached a level of completeness that enables the connection to the vehicle the available functions will be displayed at the bottom of the window. The first function that is enabled after identifying Brand, Model and Year model, is the Intelligent System Scan (ISS).

(1)

The screenshot shows the auto.com website interface. At the top, there is a navigation bar with the auto.com logo and a search bar. Below the search bar, there are several filter tabs: Brand, Model, Year model, Type of system, System, Name, Gearbox, and Equipment. A home icon is located on the left side of the page. The main content area features a search bar with a VIN field and a country dropdown menu set to 'SWE'. Below the search bar, there is a 'History' section showing a recent search for 'Ford Mondeo [00-07] (2004 (VIN 11 = 4))'. At the bottom of the page, there is a 'Favourites' section with a grid of car brands, each with a small car icon next to it. The brands listed are Audi, BMW, Fiat, Subaru, Volkswagen, Volvo, Abarth, Alfa Romeo, Bentley, BMW, Cadillac, Chevrolet, Chrysler, Citroën, Dacia, Daewoo, Daihatsu, Dodge, Ferrari, Fiat, Ford, Foton, Gaz, GWM, Honda, Hyundai, Infiniti, Isuzu, Iveco, Jaguar, and Next.

(2)

(3)

(4)

(5)

(6)

(7)

Favourites	Brand
Audi	Abarth
BMW	Alfa Romeo
Fiat	Audi
Subaru	Bentley
Volkswagen	BMW
Volvo	Cadillac
	Chevrolet
	Chrysler
	Citroën
	Dacia
	Daewoo
	Daihatsu
	Dodge
	Ferrari
	Fiat
	Ford
	Foton
	Gaz
	GWM
	Honda
	Hyundai
	Infiniti
	Isuzu
	Iveco
	Jaguar
	Next

### 6.3 Navigation

In order to facilitate navigation in the program, there are some supplements to what you normally find in other programs. An example is the red marker that shows where in the program you are, what you have chosen, or what is active. The marker is seen as a red frame. The red marker's function varies, depending on if you use the mouse or the keyboard to move around in the program. If you use the keyboard to navigate in the program, the red marker moves directly, e.g., to the button you choose. You can navigate by pressing the TAB-key or the arrow keys. In general, the arrows are used to navigate within a field or a work area. The TAB-key is used to switch between menus, etc. The button highlighted by the red marker is activated by pressing Enter ↵. If you use the mouse, a dashed red marker is moved to the button or component that the mouse is over. First when you have pressed on, e.g., the button, then the whole red marker moves.

The vehicle selection can be controlled with the keyboard to filter the shown information. E.g. press [F] key on the keyboard when the Brand selection is active and all Brands starting with the letter "F" are shown. Ferrari, Fiat, Ford, Foton. Use the mouse or arrow keys and Enter ↵ to select the brand.



## 7 General functionality



### 7.1 Program help

The easiest way to access help in the program is to press the help button in the program, found in the left hand menu. Another way is to use the key "F1" on the keyboard. The same help in the form of a user manual (PDF) is also available using the start menu.



### 7.2 Save & print test report

To be able to give the customer a report of what was found and done to the car, it is possible to generate test reports in the program. These test reports can either be printed out immediately when you have done the test, or saved for future use. If you choose to save a test report, a PDF file is generated. It can be read using Adobe Acrobat Reader, which can be downloaded for free from [www.adobe.com](http://www.adobe.com).

Two different types of test reports can be saved: OBD-test, as well as Generic OBD. More information on its function is found ahead in the manual. To save or print a test report you press the button "Print/Save". The function may vary, depending which type of test you have chosen to save or print. Common for all tests is that you can add information about the test that was done, e.g., information about the car, driving distance, or general information about what has been fixed. For OBD-test it is also possible to choose which systems you want to include in the test report, on the condition that several systems have been tested. This makes it easy to compile a complete test report of all systems in the car. It is also possible to print the help instructions available for certain diagnostic functions.

### 7.3 Open saved test report

To access saved test reports, the easiest way is to go to the main menu and choose "File" and then "Open saved test". If the suggested search path has been used to save a test report it is found in the directory that opens. Select test report to be opened, and click on "Open".

### 7.4 External programs

Depending on the type of installation and license, the program may include links to other external programs. These may be, e.g., information systems, parts catalogues, etc.

### 7.5 Demo mode

By enabling the program in demo mode you can run most functions in a simulation. Note that regardless of which car or function you chose, the same simulated information and values will be shown. When the program is enabled in demo mode, a dialogue is shown before you choose function that tells you that the program is running in demo mode.

### 7.6 License

You need a valid hardware key to be able to use the program. Should it be that you need to enter the hardware key at a later time, go to the main menu and choose "Help", and then "License". Enter the hardware key consisting of twelve (12) letters and press "OK".

# 8 Program configuration

Functions for program configuration are accessed using the main menu and "Settings".

## 8.1 Workshop information

Under the tab "Workshop" you can change/enter information about the workshop as well as add mechanics. This information is used, among others, when you print or save test reports. To add a new mechanic you click on the plus (+). Then a window appears where you can enter information. To delete a mechanic, select the name in the list and then click on the recycle bin.

## 8.2 Language

Under the tab "Language" you can choose the languages installed in the program. Choose language and then press "OK" to save the selection. Note that you have to restart the program after choosing new language, only then does the language selection change.


## 8.3 Hardware settings

Under the tab "Hardware configuration" you can set COM-port for the diagnostic unit as well as update connected diagnostic unit with new software (firmware). There are three ways to set COM-port: "Search", "USB/BT" and "Bluetooth (direct)".

If you choose "Search", the program automatically searches for a diagnostic unit to connect to and then shows information about the diagnostic unit that was found. In "USB/BT" mode, it is possible to manually choose a specific COM-port as well as test the connection by pressing "Test". Bluetooth Direct is an option where the diagnostic software scans all Bluetooth devices to direct access the VCI.

Note that for all cases, the diagnostic unit must be configured to the computer as well as supplied with voltage (power).

*If the program still does not find a diagnostic unit, you may have to troubleshoot using the unit manager. In that case, contact your distributor for more information. Also see the chapter on Computer configuration.*

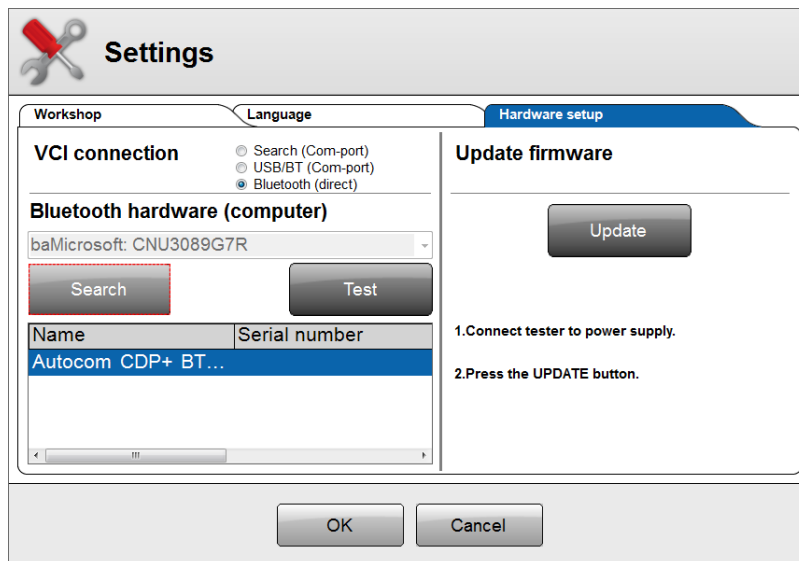

## 9 OBD – On Board Diagnostics



### 9.1 Introduction

A modern vehicle uses electronic control systems, e.g., fuel control systems, brake control systems, climate control systems, and control systems for automatic transmissions to control the vehicle's different functions. The control systems use a variety of sensors and actuators (input and output signals) to control the control system's function. When a sensor is defective, it may result in the sensor not being able to report correct information to the control system, which affects the possibility to correctly calculate an output signal to the system's different actuators. This results in incorrect or lost function for the control system.

OBD is really about monitoring these input and output signals to assess the control system's functionality. Thus, in addition to controlling a certain function in the vehicle based on the control system's input and output signals, the system has a built-in self-diagnosis, the function of which is to monitor the control system's own function and indicate to the user that something is wrong. This normally takes place with a flashing system symbol/MIL (Malfunction Indicator Lamp) in the vehicle's instrumentation, or other indication to the driver that the vehicle should be brought to a workshop. Thus, the OBD-system indicates that something in the system is wrong, not what or how serious the fault is. To obtain information about what is wrong, a special-purpose tool has to be connected to the vehicle's diagnostic socket and the required information about the system's status has to be read out.

### 9.2 Connection

Throughout the years, vehicle manufacturers have had different ways of connecting troubleshooting tools to their vehicles. The connection/connector has been developed in-house to fit the individual vehicle manufacturer's need for connection. Since the middle of the nineties several vehicle manufacturers have chosen to use the standardised diagnostic socket J1962(SAE)/15031-3(ISO), depending on legal requirements in the USA/1996 and in the EU/2001 for gasoline-powered vehicles up to 3,500 kg, as well as USA/2004 and EU/2005/2006 for diesel-powered vehicles up to 3,500 kg. The vehicle manufacturer must use the standardised diagnostic socket to enable primarily government authorities to connect with a general tool and read off statutory emission-related information from the vehicle. This is still not a requirement for other control systems in the vehicle, such as brake control systems or climate control systems, however a majority of vehicle manufacturers have decided to use one type of connection in their vehicles.

### 9.3 Distributed control systems

Control systems may be so-called distributed control systems, meaning that they handle several system functions in the vehicle. This is managed in many different ways by different vehicle manufacturers, e.g., by grouping all functions around the right A-pillar in a control system, such as external rear-view mirror, front side airbag, and door electronics such as power windows, locks, and side airbag. The designation of such a system may become "Airbag, right front". The designation may be due to the airbag being regarded as the most critical system in the context, but information from the control system may also be related to, e.g., power windows and not only airbag. In cases where the control system is a so-called distributed control system, this shall be stated in the information for the chosen control system in the diagnostic system.

## 9.4 Diagnostic functions

The diagnostic system is able to perform the functions, "Read fault codes", "Delete fault codes", "Real time data", "Component activation", "Adjust", and "Write to ECU". That which is possible to do depends on what is available in the control system in question. This varies between different control systems, but also between vehicle manufacturers, where strategies are different for what information is required to maintain its vehicles on the aftermarket. The terms "Read fault codes", "Delete fault codes", "Real time data", "Component activation", "Adjust", and "Write to ECU" are found in this diagnostic system, but may be described differently in other diagnostic tools available on the market.

### 9.4.1 DTC - Read fault codes



Fault codes consists of information stored when the OBD-system senses that the control system works outside valid limit value. When the trouble code is stored, in principle this means that the malfunction lamp is lit in the vehicle's instrumentation. Malfunction lamp is most often not available for all control systems in the vehicle, but normally only for systems that affect the vehicle with regards to operation and safety. Other systems store fault codes, but it is customer requests based on malfunction symptoms in the control system's function that is the basis for reading out fault codes.

Read-outs of fault codes from the vehicle's control system may be presented in different ways depending on how much information that the vehicle's control system can supply. In most cases the presentation shows a fault code number, component description, and information about the fault code's status, that is, if it is "Permanent" or "Intermittent".

Ex.

*C1016 Brake light switch, intermittent*

In some cases there is additional fault description in the form of, e.g., short-circuiting to ground or open circuit.

Ex.

*C1016 Brake light switch, intermittent  
- Open circuit*

More information about so-called "frozen data", i.e., data that shows parts of the vehicle's status when the problem occurred, such as engine temperature or rpm, may appear.

Ex.

*C1016 Brake light switch, intermittent  
- Open circuit*

*Vehicle speed 87 km/h*

*Brake pedal position                      On*

Which information and to what extent the information is presented in the diagnostic system depends on what the vehicle's control system is able to present.

### 9.4.2 DTC - Delete trouble codes



"Deleting trouble codes" will delete saved malfunction information from the control system's memory. In most cases the control system's memory is deleted directly, however, there are control systems that first require an action from a connected diagnostic system, then to be followed by a mechanical action, for example. "Ignition off for 10 seconds" thereafter "Ignition on". When mechanical or other action is required, this shall be stated in the information for the chosen control system in the diagnostic system. When trouble code recurs immediately when reading trouble codes after deleting, it is likely that the trouble code is permanent and that the OBD-system senses the malfunction during its self-test and immediately stores the trouble code again.

### 9.4.3 RTD - Real time data




“Real time data” is a partial quantity of the input and output signals that the control system uses to calculate and regulate its control. Real time data presents how the control system experiences the input signals that are the basis for what the output signals should look like.

In diagnostic systems, real time data may be presented in different ways when different input and output signals are suitable for analysis in different ways. For this purpose, the presentation may be a graph or a numerical list. The predefined groups found in the diagnostic system is the most optimal grouping from an update perspective. That is, the or those parameters that are presented at the same time are presented/updated as fast as possible. The number of parameters that are presented together and updating (reading) frequency in the predefined groups vary depending on the control system’s design and not the diagnostic system. Using the diagnostic system, it is possible to create a “customer defined” group composed of different parameters, and these groups can also be presented in the form of a graph or numerical list.

*Note! Creating a “Customer defined” group may mean that the updating (reading) frequency of real time data deteriorates radically. Keep this in mind, primarily when presenting components that are to be changed cyclically, such as lambda (oxygen) sensors. In a worst case, the diagnostic system can update real time data from the lambda (oxygen) sensor at the same time in its cycle, which then results in presentation of a constant value for a component that is expected to change periodically.*

To show display mode, use function buttons (1) and (2). Button (1) to show numerical list and button (2) to show graphs. Parameters without numerical values, e.g., status Active/Inactive, are shown as text even in graph mode.

Button (3) opens a list with all parameters that are available in the control system. By selecting parameters and moving to selected parameters with the arrow keys (5) you create a personally defined list. Use the recycle bin (4) to empty the list. When the list is done, use the buttons (1) and (2) to show the real time data.

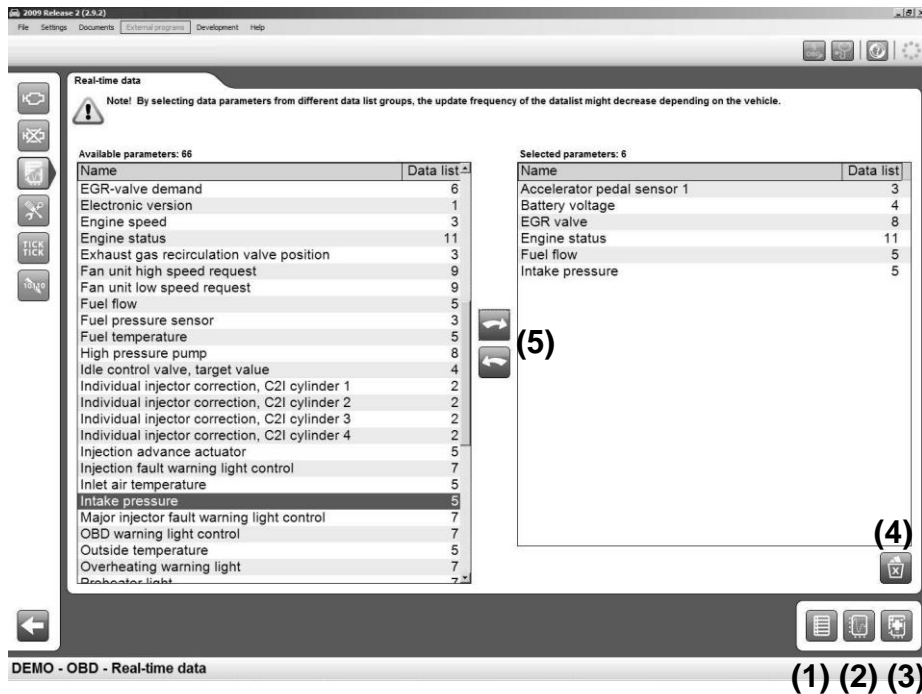

## 9.4.3.1 Flight Recorder



The Flight recorder function gives the possibility to bring the VCI in the vehicle while driving on the road and record/log real time data parameters. There is no limitation what systems and parameters can be recorded, but in some cases the vehicle stops communicate while driving.

This is controlled by the control unit in the vehicle and is individual. Before a flight recorder template is stored in the VCI the selected parameters are verified. The flight recorder template consists of information regarding selected control system and real time data parameters to be recorded. When a recording is performed a session is stored in the VCI. When the VCI is connected to the PC the session can be uploaded. The session contains the recorded data. The session is displayed in a graph window.

The recording is started with the Flight rec-button on the side of the CDP+ (See chapter 4.3). After the CDP+ has been connected to the vehicle the button shall be pressed and held until the multi colour indicator turns yellow and a sound is heard. The CDP+ initiate communication with the control unit. The yellow light on the multi colour indicator is running to show that communication is active. To end the recording keep the Flight rec-button held until the multi colour indicator turns white and a sound is heard.

### 9.4.3.1.1.1 Create a Flight recorder template

To start a flight recording the template must be created and downloaded to the VCI. This is done in the custom datalist in real time data. When one or more parameters are selected the flight recorder button (1) becomes active and it is possible to download the template to the VCI.

2011 Release 2 (2.11.2)

File Settings Documents ... External programs ... Register parameters ... Help

Real-time data

Note! By selecting data parameters from different data list groups, the update frequency of the datalist might decrease depending on the vehicle.

Available parameters: 66

Name	Data list
A/C, power consumption	6
AC compressor relay	7
Accelerated idle request	9
Accelerator pedal position...	3
Accelerator pedal sensor 1	3
Accelerator pedal sensor 2	3
Air conditioning requested	9
Air inlet temperature sensor	3
Atmospheric pressure	5
Battery voltage	4
Brake pedal	9
Calculated mass air flow value	5
Calibration number	1

Selected parameters: 3

Name	Data list
A/C, power consumption	6
Accelerator pedal sensor 1	3
Air inlet temperature sensor	3

(1)

OBDDemo function - OBD - Real-time data

### 9.4.3.1.1.2 Upload a Flight recorder Session

The upload of the flight recorder Session is done in the front page window.



When you press this button an information window is opened. This gives you a short guide in using the flight recorder. The next step is to upload the session stored in the VCI.



In the Upload window you have a possibility to open a previous flight recorder session. When you click the "Open file" button (1) you can browse to find the file you want to display.

The "Read Template" button (2) connects to the VCI and reads the information. If a Session is stored the "Upload Session" button (3) is enabled and it is possible to upload the stored data. The "Close" button (4) cancel the action.



(1)

(2)




(3)

(4)

### 9.4.3.1.1.3 Display the Flight recorder Session

When the Flight recorder session is uploaded a graph window will open. At first there are no parameters selected and View mode (1) is set to Combined. In Combined view mode the selected parameters (2) are displayed in the same graph window. Scale (3) is set in percentage (%) where maximum value is displayed as 100 % and minimum value is displayed as 0 %. In Split view mode all parameters are displayed in separate graph windows. In this case Scale is actual value.

There is a marker (4) in the graph window to get the actual value in the parameters list. Triggers can be set during flight recording. This is done by clicking the Flight Rec. button on the VCI (See chapter 4.3). The trigger points are displayed as lines in the graph window (5). The Graph window can be zoomed. Either by using the scroll wheel on the mouse, to zoom in and out, or by double click the left button on the mouse to zoom in and double click the right button on the mouse to zoom out. It is possible to adjust the areas of the window by moving the line between Graph window and parameters list (6). Exit the flight recorder function by clicking the back button in menu 1 (7).

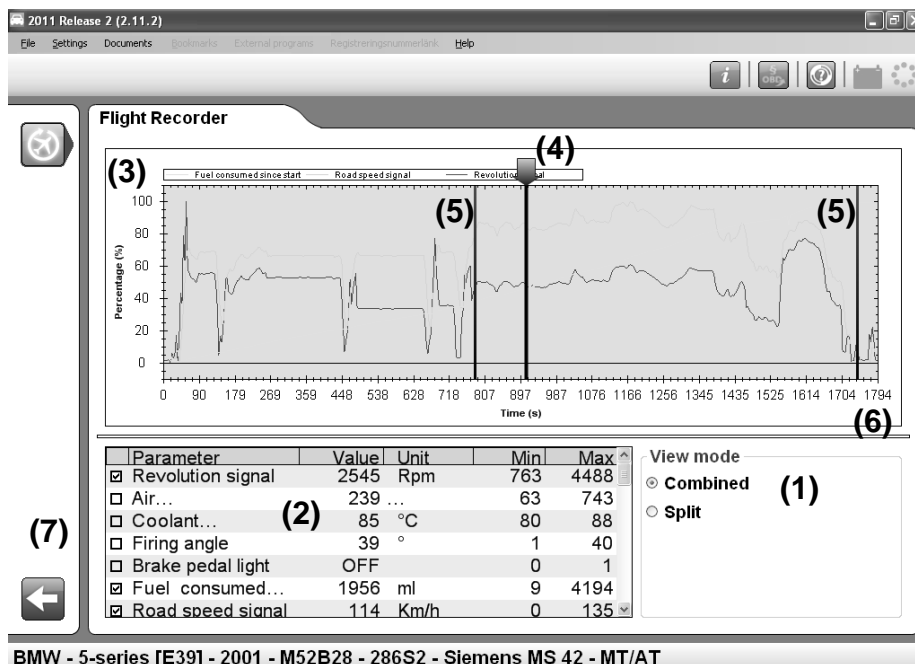

BMW - 5-series [E39] - 2001 - M52B28 - 286S2 - Siemens MS 42 - MT/AT




## 9.4.4 ACT - Component activation



"Component activation" is a way for the diagnostic system to force the control system to bypass its own control function and to let the diagnostic system control/change the output signal. In this way, the diagnostic system can "force start", e.g. the engine's cooling fan.

Which components and how activation is designed depends on the control system's design.

In most activation cases the diagnostic system presents a number of components that are possible to active, the choice of component controls what is activated in the vehicle. It is also possible that the diagnostic system only has the choice to start the activation, then the control system starts a cyclical activation of different components for the control system, which cannot be affected except that it is possible to cancel the cycle. Some actuators require a certain vehicle status to be activated, e.g., that the engine is running. The basic mode is always "Engine off"/"Ignition on". If other conditions apply, this is stated either in the connection instructions or in an information dialogue in connection with activation. Certain activations are time-fixed and cannot be cancelled. A sequence indicator (5) is shown in these cases. In other cases activations are controlled with buttons (1), (2), (3), and (4) in the work area.

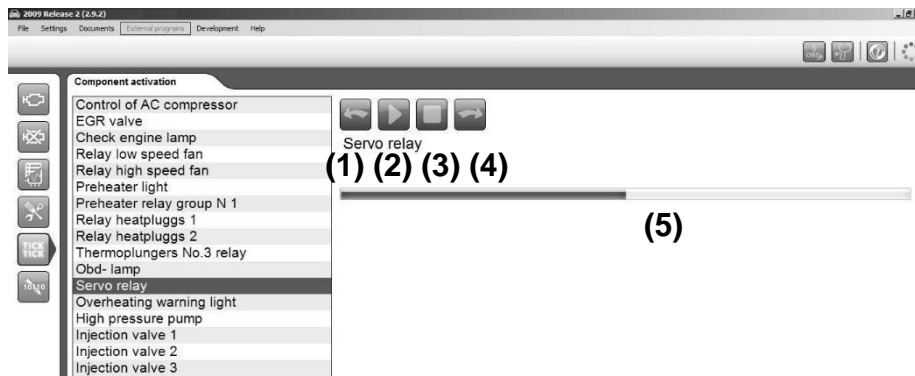

## 9.4.5 ADJ - Adjust



"Adjust" is an advanced function where the diagnostic system is used to change the control system's functionality, temporarily turn off functions in the control system, or control system functions in the control system. These functions may be required to finish replacement/repair of defective components or when doing service work. Before an

adjustment function is performed, it is important to read through the help instructions and to follow the instructions in the diagnostic system. Not following instructions and directions from the diagnostic system means risk of damaging the vehicle's control system.

## 9.4.6 COD - Write to ECU



The function "Write to ECU", also called coding, is an advanced function where the diagnostic system is sued to add new information to the control system. Examples of coding functions are injector coding, key coding, or replacement of a complete control system/actuator. Before a coding function is performed, it is important to read through the help instructions and to

follow the instructions in the diagnostic system. Not following instructions and directions from the diagnostic system means risk of damaging the vehicle's control system.

## 9.4.7 ISS (Intelligent System Scan)



For most vehicle brands there is ISS (Intelligent System Scan). For the vehicle brands where ISS is available, it will show at the bottom center of the screen when Brand, Model and Year model has been selected.



The function scan through the control systems that are chosen/marked in the list in ISS. The scan is started with the button in the right corner at the bottom. Communication is established with the control units and the software reads out fault codes stored in the control systems. The result is presented with one of four colors marked for the chosen control systems.

- Green implies that the control system answers correctly and there are no fault codes stored.
- Red implies that the control system answers correctly with fault codes stored in the system.
- Orange implies that it is not possible to identify the control system in a single-valued way. The user must make a choice.
- Grey implies that the control system does not answer.

To see the stored fault codes, click on the arrow for each respective system. It is possible to erase fault codes by clicking on the symbol for erasing fault codes in the right corner at the bottom. It is also possible to go straight to complete OBD. There are further instructions in the software for each respective part.

### Glossary

Permanent: Irreversible - Present

Intermittent: Periodically recurring - Comes and goes

OBD: On Board Diagnostics

MIL: Malfunction Indicator Lamp - Lamp for indicating malfunction

DTC: Diagnostic Trouble Code - Fault code

RTD: Real Time Data - Real time data

ACT: Activation - Activation

ADJ: Adjustment - Adjustment

COD: Coding - Coding

ECU: Electronic Control Unit - Control system, controller (actuator)

SAE: Society of Automotive Engineers

ISO: International Organization for Standardization

# 10 Generic OBD – ISO 15031



## 10.1 Introduction

Generic OBD is a program used to read out data from the car's built-in statutory diagnostic function, the primary function of which is to monitor emission-related components' function. In Europe this standard function is called eOBD, in the USA it is called OBD2, and in Japan it is called JOBD. We have decided to collect these standards in one and the same software. It also contains all standards for reading out statutory OBD on heavy vehicles.

## 10.2 Connecting to vehicle

Immediately when GOBD is chosen, either using the function key in the top right corner or using the car selection, connection to the vehicle is started. Therefore, it is important that the vehicle has been prepared for diagnosis before you press the button. The vehicle shall have the ignition on or the engine running to enable connection to all systems.

## 10.3 General use of the program

The program is controlled using the function buttons in function menu 1, function menu 2, and with buttons in the work area. Each function/mode is described below. Generic OBD is available in two user levels. To change level, go to the Settings menu and select/deselect "Generic OBD Advanced mode". When the program is in Advanced mode all functions are available. In User mode functions for legislated verification of the vehicle manufacturer is hidden. We highly recommend User mode for use in workshops and with the intention to diagnose the vehicle. Note that when the car does not support chosen function/mode, then "not supported by vehicle" is shown.

### 10.3.1 Information



The first window that appears is the information window containing general information about the vehicle you are connected to.

- Available control units. The list with available control units includes all those control units that support the eOBD standard.
- Information. In the list under the heading information, specific data is shown for the chosen ECU. To choose another ECU, click on it in the list with available control units. This box shows three different values, such as: MIL status, quantity of fault codes (permanent), as well as which communication standard is being used.
- Main information. Main information shows which communication type that the vehicle uses to communicate and the total quantity of fault codes from all control units. This also shows if the MIL is lit.
- Readiness tests. The list for readiness tests shows tests for chosen ECU, and if they are supported by the control unit. The different values that can be assumed are done or not done. The following tests are standard in OBD II/eOBD:
  - Misfires
  - Fuel system
  - Component test
  - Catalytic converter
  - Preheated catalytic converter
  - EVAP
  - Secondary air system
  - AC-system
  - Preheated lambda (oxygen) sensor
  - EGR-system


## 10.3.2 Reading fault codes



This lists both permanent and intermittent fault codes from the control units that support the eOBD standard. They are shown with ECU-number, fault code number, as well as a description of the fault code.

- Confirmed and stored codes (1). The codes shown in this list are stored fault codes.
- Pending codes in previous and current driving cycle (2). The fault codes shown in this list are fault codes that must be set for a certain time or a certain number of times to be stored as a confirmed code.

It is possible to save and print a list with fault codes (3).

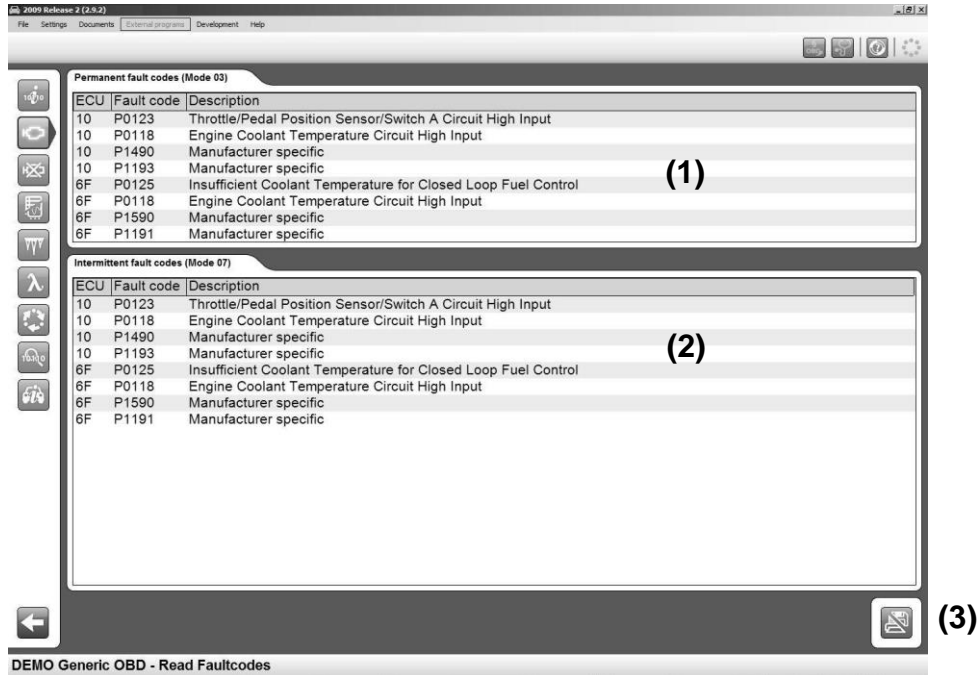

## 10.3.3 Deleting diagnostic information



With this function you can delete fault codes and diagnostic information. Pressing the button delete will delete the fault codes shown under reading fault codes. If this should fail, a message is shown detailing which control units have deleted successfully and which have failed to delete. If all control units successfully delete diagnostic information, a message is shown telling you that all went well. This function not only deletes fault codes, it also deletes the readiness tests as well as frozen data. To perform the readiness tests again, the car has to be run through driving cycles. Some tests are more advanced than other, and therefore take longer time to complete.

## 10.3.4 Real time parameters



Here you can read data from the chosen ECU and chosen value. The values are updated continuously. If a value is chosen the activity indicator will start to spin again in the top right corner of the window that indicates that continuous reading from the vehicle is in progress.

### 10.3.4.1 Data list



The function consists of three different parts, Values, Current data, and Information. The value list lists the real time parameters that the user can chose, arranged per ECU. The current data list includes the chosen values that the user has chosen, and the information box shows information about the values that have additional explanation. To be able to see a value, it must be chosen in the box under the heading values. All these values do not have a number value as a result, it may also be a text message, or a value that refers to a text. In order to know if the value refers to a text or a specific value, you can check this in the column for unit. If it reads INFO, you can click on this row and information about the value is shown in the box for information.

### 10.3.4.2 Graph



Another function is that you can see a graph of up to three chosen values from the list for current data. To chose these, click on the row in the current data list with the value you are interested in. If it is not chosen this may be due to that the chosen value cannot be shown in a graph. A hint informing that the value cannot be chosen is shown to get quick information about this. Then, when one to three values are chosen in the list you can press on the tab graph. When this is done, the graph is shown. With the graph function it is possible to stop and start the graph. It is also possible to go to the beginning or end of the graph. Min. and Max. values change continuously during the graph cycle.

## 10.3.5 Frozen data



Here you can read stored data values belonging to permanent fault codes from different control units. Control units with stored fault codes are shown in the list "Available control units". Values belonging to a chosen ECU are shown in a list. When the fault code is set, current data is stored in the control unit, which then can be read out and used when troubleshooting the vehicle. The list number states which list is shown. A fault code can store up to 255 different lists. The user can scroll between these lists with the buttons Previous and Next.

### 10.3.6 Lambda



In Lambda you can read out values from the lambda (oxygen) sensor. Values that can be chosen are found in the list "Oxygen sensors". These can be chosen and are then added to the list "Values", where they are read continuously. The recycle bin empties the list with values.

### 10.3.7 Non-continuous tests



These test values are read when the button for the function is pressed down and are indicated with TID- and CID-numbers that are defined by the vehicle supplier. The column Results indicates if the test has an approved value or a non-approved value. If there are no limit values, then "---" is shown in the column. To interpret the values, the user of the program is referred to the vehicle's documentation.

### 10.3.8 Diagnostic check



The list "Tests" includes the tests that are available per ECU. The standardised functions are presented with a text, while others are presented with TID-number and the text "Car specific". To see a test, click on the test in the list. Then the test will be moved to the value list. The recycle bin empties the list with tests.

### 10.3.9 Car information



This function can show three manufacturer-specified values per ECU, and these are:

- Chassis number
- Calibration identification number
- Calibration verification number

# 11 Technical specification

## CDP

- Meets EU Directive 89/336/EEG and 73/23/EEG
- Dimensions: 180 x 90 x 30 (mm)
- Weight: 0.5 kg
- Voltage supply: 10-32 Volt
- Current consumption: 100 mA
- Operating temperature: 0-50° C

## CDP+

- Meets EU Directive EMC (2014/30/EU), CE (2011/65/EU) and LVD (2014/65/EU)
- Dimensions: 180 x 85 x 30 (mm)
- Weight: 0.5 kg
- Voltage supply: 6-36 Volt
- Current consumption: 500 mA
- Operating temperature: -20 - 60° C